



LEDTV24R3T2

LED TV

USER MANUAL

IMPORTANT

Please read this manual carefully before installing
and operating the TV.

Keep this manual handy for further reference

CAUTION

 
**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

High voltages are used in the operation of this product. to reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personal.

If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centers needed overhaul.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating in the literature accompanying the appliance.

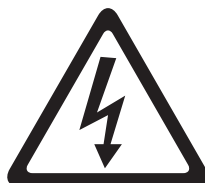

Warning
The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Important Safety Precautions

EN

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments /accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Caution:
15. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
16. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
17. The socket-out shall be installed near the equipment and shall be easily accessible.
18. This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
19. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
20. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
21. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.



 
22. Never place the TV, remote control or batteries near naked flames or other heat
23. I ilk I sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
24. The USB terminal should be loaded with 0.5 A under normal operation.
25. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions.
26. unless you are qualified to do so.
27. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
28. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth
29. The maximum using environment temperature is 45 degrees.
30. The Maximum using altitude is 2000 meters.

TV Bracket assemble


EN

Fix the TV on the wall


1. First, put the TV on the table smoothly and put some soft cloth on the table to avoid scratching the screen.
2. Use the screw driver to take off the screws which are fixed on the bottom stand (the direction of the arrow, refer to the photo1). And take off the bottom stand (please take off the screws and bottom stand carefully).
3. Make one bracket which can fix on the wall according to the size of arrow direction of photo2 and photo3.
4. Drill four holes properly on the wall (the size only for reference) and put into four screws. (optional parts) Drill four holes properly on the wall (the size only for reference) and put into four screws. (optional parts)
5. According to the step 4, use the screwdriver to lock the screw on the back of the TV. then hang the TV on the wall.

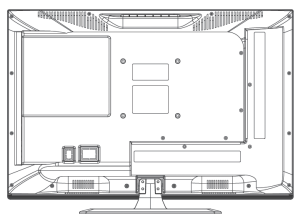


1

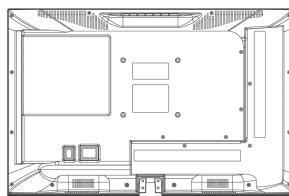 

2

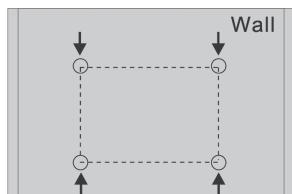 

3

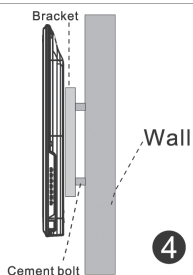 

4

Note:

1. The bracket fixed on the wall is optional part.
2. when you assemble the TV, there should be no other articles on the around and front and please keep the distance from other articles.
3. When assemble the TV, please ask the career man to fix in order to avoid the danger.
4. The fixing picture is only for reference.
5. Please follow the use manual about bracket assemble to fix the TV.
6. Attach the mounting bracket from the VESA compatible wall mounting kit.

TV Buttons And Terminal Interface

TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.



Turn ON/OFF Power.

SOURCE: External Signal Input Selection.

MENU: Display Main MENU And Confirm MENU Item Selection.

CH+/-: Selecting Channel.

VOL+/-: Adjusting Volume.



Terminal Interface


Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	AV input External AV Signal Input And Relevant Right/Left Sound Channel
	CI SLOT The card reader input CI (common interface) this requires CAM (conditional access module) used for pay TV.
	ANT 75 Connect the antennal/cable tv input (75/VHF/UHF)
	EARPHONE output When earphones are plugged in, speakers are disabled

	HDMI input Digital signal input from HDMI video connector.
	Connect to equipment with component video output.
	DC 12V input


External device connection diagram

 EN

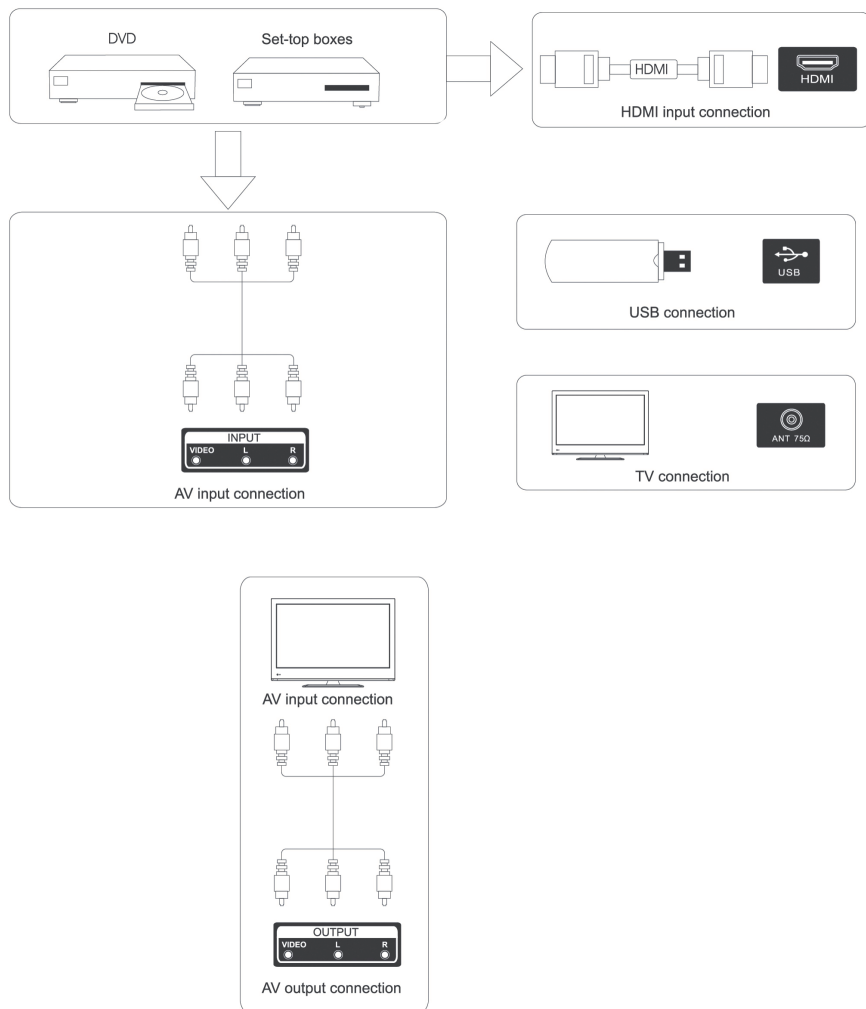

Install And Connect TV

 EN

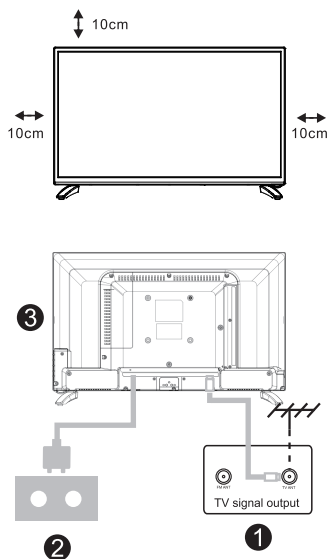

Set your TV

To put your TV on a firm place which can bear the weight of the TV.

To avoid danger, please don't position the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

Turn on TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV

Note:

 
Picture for reference purposes only.

TV Stand Installation Instructions


1. Open the carton and remove the TV and scattered accessories and base (some models without base).
2. In order to avoid damaging the TV, please cover it with soft mattress, put it on the table, face down on the soft material and screw the neck of the base to the TV.
3. screw the base and connected to the TV.
4. the installation is complete.

Note:

Picture for reference purposes only.
Please prevail in kind

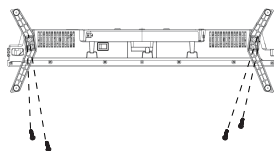

 Suggestion:
To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

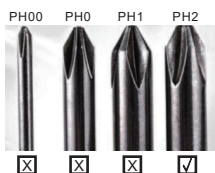


First Time Installation

EN

Input Source

- * As you wanna change Input Source, press button <INPUT> and this page will show.
- * With Navigation Keys<▲><▼>,you can select Input Source,such as DTV,ATV, Component,HDMI,AV,USB.
- * Also,you can press <INPUT>continuously to select source.
- * When you done with your operation,press<OK> to choose it,or this page will disappear automatically without nothing changed.

 CHANNEL

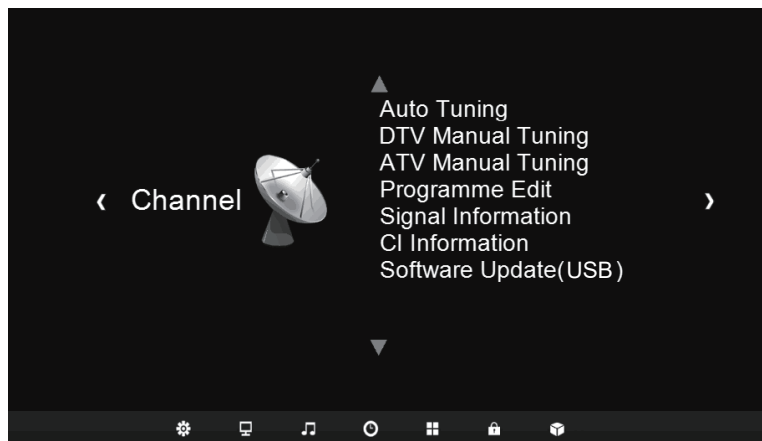

- * Press button<MENU>,this page will show,and press again,it will disappear.
- * In DTV or ATV source,all items except “OAD Tuning”can be selected, and item“Air/Cable” is only for ATV source,item“signal information” and “Software Update(OAD)”is used for DTV source.
- * In other source but DTV or ATV, the last item can be selected for Software Update(USB).
- * Select item with Navigation Keys<▲><▼>,change the Value or goto the child page with button <OK> in all main page.
- * In all main page press Navigation Keys <▲><▼> for next or previous main page.

Auto Tuning

Same as the Install Guide Page for DVB sel and Channel Tuning

Main Menu Operation

EN

DTV Manual Tuning

Manually searching related options,found only one channel frequency points.

 
ATV Manual Tuning

Manual Tuning can search up or down, and will pause when find a channel. The page will show the info with the program.
press<RED>to save it and press<MENU> to abandon it.



PICTURE

This main page design for Picture adjustment,in "PC-RGB" source,you can't adjust "Noise Reduction" or "MPEG Noise Reduction",but "Screen",in other source, "Screen"can't be adjusted.

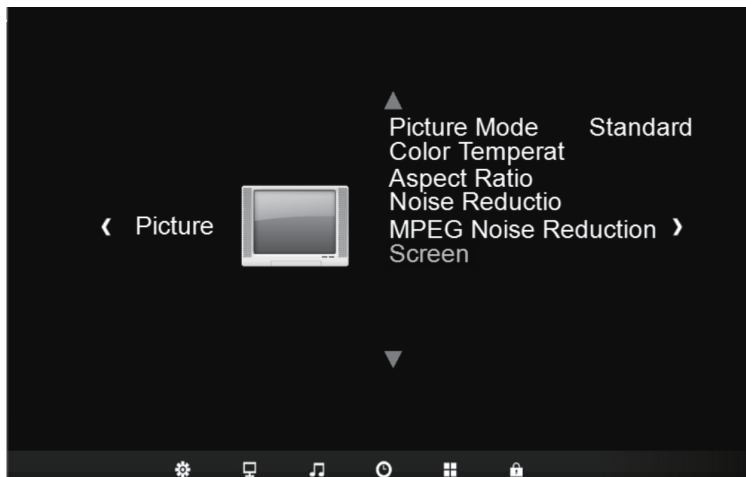

Picture Mode

There is some default options for you ,such as "Standard""Wild""Medium"or "User".
In option "User",you can decide the value of "Contrast" "Sharpness" "Color" and "Brightness" as you want.

Main Menu Operation

EN

Color Temperature

There is some default options for you ,such as“Medium”“Warm”“Cool”or “User”.In option “User”, you can select the value of “RED”, “GREEN” and “BLUE” as you want.

Aspect Ratio

There is some default options for you,such as“16:9”“04:03”“Auto”or “just Scan”.

Select it with Navigation Keys <▲><▼> in the child page.

Noise Reduction

Change the value between “Low”“High”“Middle”“Default”and “Off”with Navigation Keys <▲><▼>.

MPEG Noise Reduction

 
Change the value between “Low”“High”“Middle”“Default”and “Off ”with Navigation Keys <▲><▼>.

Screen

This item give you the right to change “H,V Pos” “Size” and “Phase” in “PC-RGB” source and you can do “Auto Adjust”.

SOUND

This main page design for Sound adjustment.Item “AD Switch” and “SPDIF MODE” are only used for“DTV” source.

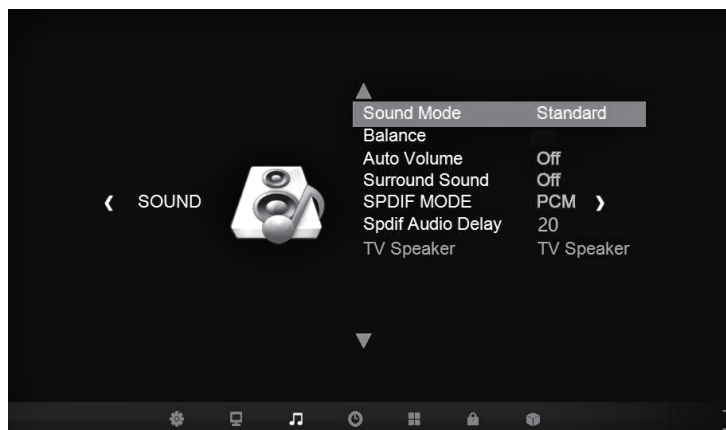

Main Menu Operation

EN

Sound Mode

There is some default options for you ,such as "Movie""Music""Sport"or "User".In option "User", you can select the value of "Treble" and "Bass" as you want.

Balance

This item is designed for the balance of left and right volume.

Auto Volume

Change the value between "ON" and "OFF" with button <OK>.

Surround Sound

Change the value between "OFF""Surround" and "SRS TruSurround XT" with Navigation Keys <▲><▼>.

 
AD Switch

Change the value between "Low""High""Middle""Default" and "Off " with Navigation Keys <▲> <▼>.

SPDIF MODE

Change the value between "PCM" and "AUTO" with button <OK>.

TIME

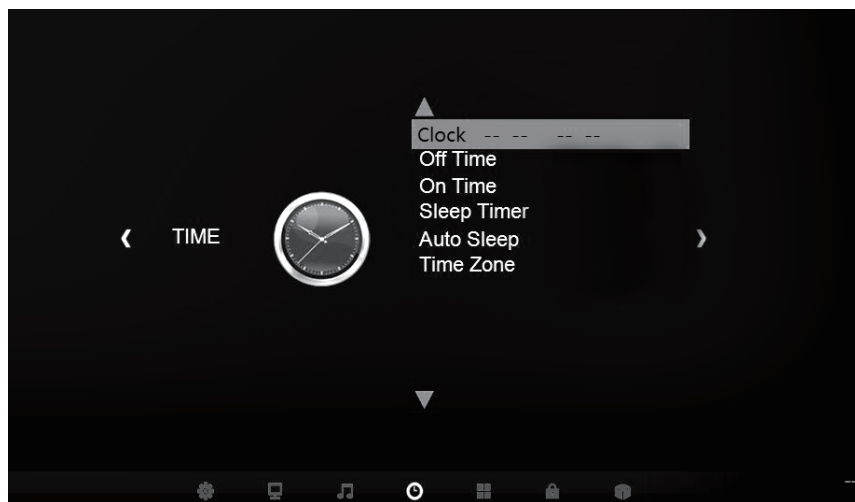

Clock

Set time for TV.

Off Time

This item is designed for Power Down as you can set the time.

Main Menu Operation

EN

On Time

This item is designed for Power Up as you can set the time.

Sleep Timer

Set the delay time that TV will go power off in, between off, 10mins, 20mins, 30mins, 60mins, 90mins, 120mins, 180mins, 240mins.

 
Auto Sleep

Set the delay time that TV will go sleeping, between never, 4HOUR, 6HOUR, 8HOUR.

Time Zone

Set time zone such as "Beijing GMT+8".

OPTION

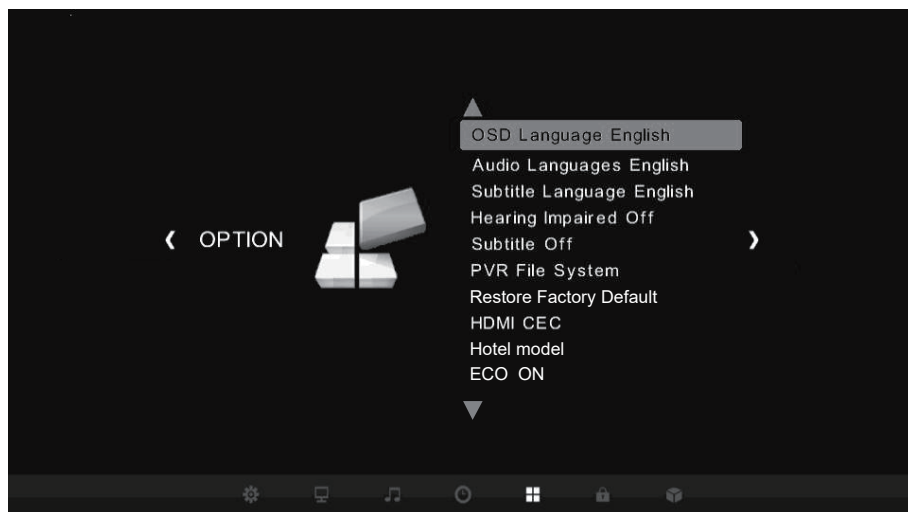

OSD language

Select the OSD language as you want, the operation is same as the Install Guide Page.

Audio language

Select the Audio language as you want, the operation is same as the Install Guide Page.

Subtitle language

Select the Subtitle language as you want, the operation is same as the Install Guide Page.

Main Menu Operation

EN

 
Hearing Impaired

Change the Value between "OFF" and "ON" with button <OK>.

Restore Factory Default

Go to reborn with all options reset to default,and it will show you a message to confirm.

LOCK

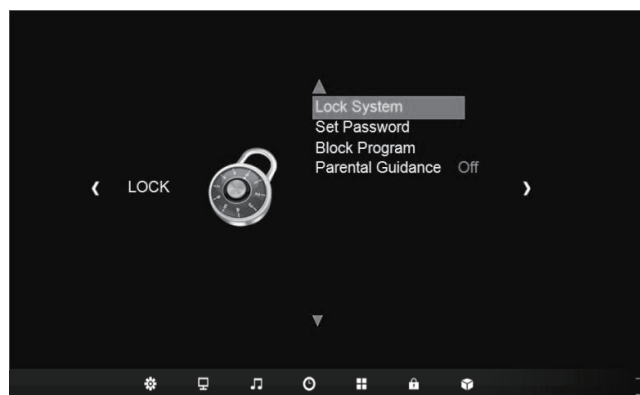


Lock System

Every time you enter this main page ,you have to enter the code for "Child lock".As the code is right ,the three items will be opened.The default password is "0000".

Set Password

Enter the old number code, the new code and confirm it.press < > to clear last number and press ➡ > to cancel.

 MEDIA PALY

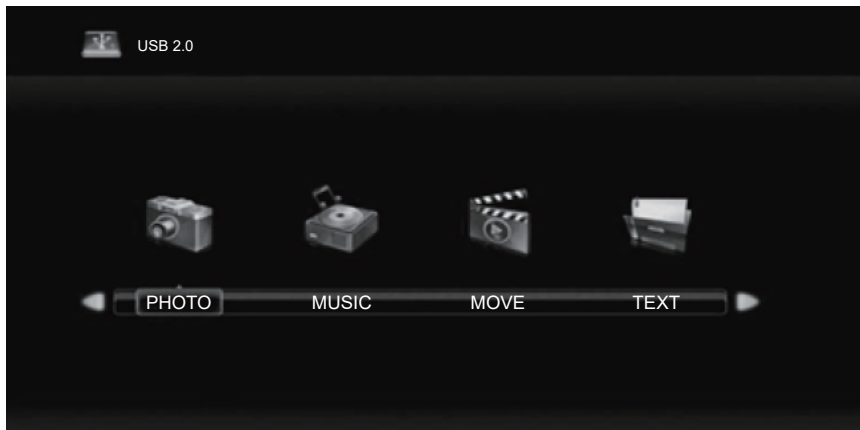

* Select "DMP" in input source, this page will show on the top, if the USB device is detected by TV, it will be shown as green and "USB 3.0/2.0".

* Choose item between "PHOTO", "MUSIC", "MOVIE" and "TEXT" with Navigation Keys <◀><▶>, and press <OK> to enter.

* The files system will show; select with Navigation Keys <▲><▼><◀><▶> and press <OK> to enter if it's a Dir. Press <OK> to select, <PLAY> to play it if it's a Media file with all your selections.

Photo

Click the picture to enter the picture playback interface as shown below, press the [◀] and [▶] button to move the cursor, and perform different operations according to the prompts. The functions of the icons on the right side of the interface from top to bottom are: picture information, zoom out, zoom in, Picture setting.

Music

Click the music file to enter the music playback interface as shown below. Press the [◀] and [▶] button to move the cursor and perform different operations according to the prompts.

Movie

Click the video file to enter the video playback interface as shown below, press the [◀] and [▶] button to move the cursor, and perform different operations according to the prompts.

No power	• Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on.
Signal not received properly	• Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation, or adjust the direction of the external antenna. • If you use an indoor antenna, under certain circumstances signal reception may be more difficult. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.
No picture	• Check if the antenna at the back of the TV is connected properly. • View other channels to see if the problem still occurs.
Video appears with no audio	• Try increasing the volume. • Check if the TV's sound is on mute or not.
Audio is present, but video does not appear or is discolored	• Try adjusting the contrast and brightness.
Static noise affects video and audio quality	• Check if the antenna at the back of the TV is connected properly.
Broken lines on screen	• Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct, or try using new batteries with the remote control. • The TV will go into Standby mode if it receives no response in a few minutes.
No video (PC mode)	• Please check if the cable is connected to the HDMI port correctly, or if the cable is bent in some places.
Vertical line blinking (PC Mode)	• Enter the main menu, and adjust the vertical placement to eliminate the vertical line.
Horizontal tearing (PC Mode)	• Adjust the horizontal placement of the screen to clear any horizontal lines.
Screen is too bright or dark (PC Mode)	• Adjust the brightness or contrast in the main menu.
No response from the PC	• Check if the PC's display resolution is set to a compatible resolution for the TV.
Lines appearing when a device is connected to the RCA port	• Make sure you are using a cable of good quality.
Problems are unresolved	Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact the service center.

Specifications

EN

Screen Size	power Consumption	Main accessories
24"	36W	User's manual x1 Remote controller x1 AAA Batteries x2 (Optional)

★ LIFE TIME : 60,000 Hrs



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Remote Controller

EN

Descriptions of TV remote control

1. **POWER:** Turn on the TV or enter standby mode.
2. **MUTE:** Turn off the sound and turn on when press again.
3. **0-9:** Figures "0-9" are used to directly input channel number.
4. **-/--** : Press this button before entering a program number greater than 09.
5. **↶** : Return to last viewed program/signal source.
6. **MENU:** Start system menu and return to upper menu.
7. **SOURCE:** Input source selection button.
8. **▼/▲ ◀/▶ ENTER:** Allow you to navigate the on-screen menus and adjust the system settings to your preference.
9. **EXIT:** Exit from the menu or sub-menu and cancel the function in process (if applicable)
10. **INFO:** When pressed while you are watching a programme, detailed programme information appears.

Battery Installation:

 
Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Refix the battery compartment lid.

Slide the lid until you hear it click into place.

Using the Remote Control:

Unless stated otherwise, the remote control can operate all the features of the MONITOR.

Always point the remote control directly at the remote sensor in the front of the MONITOR.

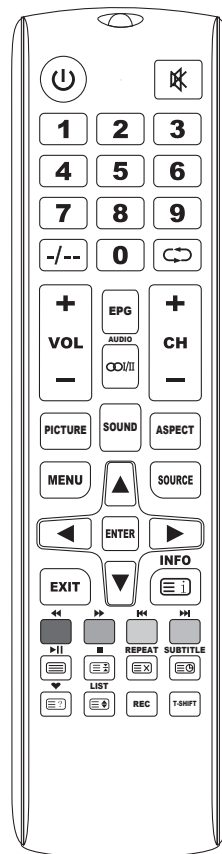

CAUTION:

 
Batteries installed in the unit should not be exposed to excessive heat such as sunshine, fire and the like

Remote Controller

EN

Descriptions of TV remote control

11. **VOL+/VOL-**: Press to increase / decrease the sound level.
12. **CH+/CH-**: Press to scan through channels.
13. **EPG**: Enter electronic program guide (only for DTV mode).
14. **AUDIO**: Display and selects audio systems.
COI/II: The button can be used to switch among the option that you want.
15. **P.MODE**: Press to cycle through the different picture settings.
16. **S.MODE**: Press to cycle through the different sound settings.
17. **ASPECT**: 1. Select picture scale.
 2. fast forward in PVR or Media Player mode.
18. **COLOR BUTTONS**: Teletext switch of the analog parts, the items selection in the menu of the digital parts and the practice of the MHEG⁵ in the DVB menu.
19. **Media Player Control**: Digital media player control button:
 Include play / pause, stop, backward, forward, next, previous (in USB mode).
20. **REPEAT**: USB Mode: Press to select the repeat play mode.
21. **SUBTITLE**: To show and set the language of current DTV.
22. **♥**: press to open the favorite list.
 then you can select the favorite channel.
23. **LIST**: TV Mode: Press to call Channel List.
24. **REC**: Record begin in PVR mode.
25. **TIME SHIFT**: DTV channel time shift Function.
26. **TEXT INDEX**: **TEXT Mode**: INDEX-Press to call Index main page.
27. **TELETEXT**: **TEXT Mode**: Press to call teletext. Press button again to turn off teletext.
28. **FREEZE**: **TEXT Mode**: HOLD-press button to freeze teletext page. Press button again to unfreeze page.
29. **CANCEL**: **TEXT Mode**: Cancel the teletext but not to exit teletext press again to show teletext.
30. **SUBPAGE**: **TEXT Mode**: Press button to turn on Subpage. Press again button to turn off Subpage.
31. **QUESTION**: **TEXT Mode**: Press button to display hidden teletext information.
32. **SIZE**: **TEXT Mode**: Size-Press to change teletext size.

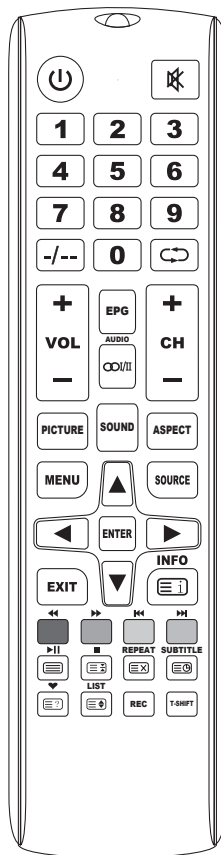

EU DECLARATION OF CONFORMITY

Date of issue: 2026-May-15

We,
Mobile Center UAB
Veterinarių g. 44, Biruliškės
LT-54469 Kauno r., Lithuania
www.mobilecenter.lt

declare under our sole responsibility that the product:

Product identification :
Product: LED Television
Brand: eSTAR
Model: eSTAR LED TV Model LEDTVxx series R T2 (22",24")
Description: LED television with DVB-T2 and DVB-S2 receivers, no Wi-Fi, no Bluetooth

This product is in conformity with the following Union harmonisation legislation:

RED 2014/53/EU (receiving function only); EMC 2014/30/EU; LVD 2014/35/EU;
Ecodesign Directive 2009/125/EC and Regulation (EU) 801/2013;
RoHS Directive 2011/65/EU as amended by (EU) 2015/863.

Applied harmonised standards:

EN IEC 62368-1:2020 + A11;
EN 55032; EN 55035; EN IEC 61000-3-2:2019 + A2; EN 61000-3-3:2013 + A1 + A2;
ETSI EN 303 340 V1.1.2 (DVB-T2); ETSI EN 303 372-2 V1.1.1 (DVB-S2);
EN 62479:2010; EN 62087; EN IEC 63000:2018.

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation.

This declaration is issued under the sole responsibility of the importer.

Place and date: Kaunas, Lithuania, 2026-05-15
Signature: _____
Name: Rolandas Pridotkas
Position: CEO



